

MISUTONIDA

  *italian style* **4x4**
accessories

GREAT WALL STEED/WINGLE



Item Code

Codice Articolo

Référence Article

: **MA/303/IX**

GB

STAINLESS STEEL
HIGH MEDIUM BAR

ITA



MEDIUM BAR ALTO IN ACCIAIO
INOX

FR

HAUT MEDIUM BAR
EN ACCIER INOX

GREAT WALL STEED/WINGLE

Part List	
Lista della bulloneria	
Liste des pièces	
A	TE 8x25 x 4
B	Ø 8 x 6
C	Ø 8 x 6
D	M 8 x 6
E	T B C E I 6X25 x 2
F	Ø 6 x 2
G	Ø 6 x 2
H	T B C E I 8X25 x 2
I	MA/254/C x 2
L	MA/303/C x 2

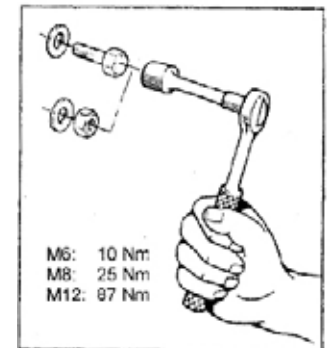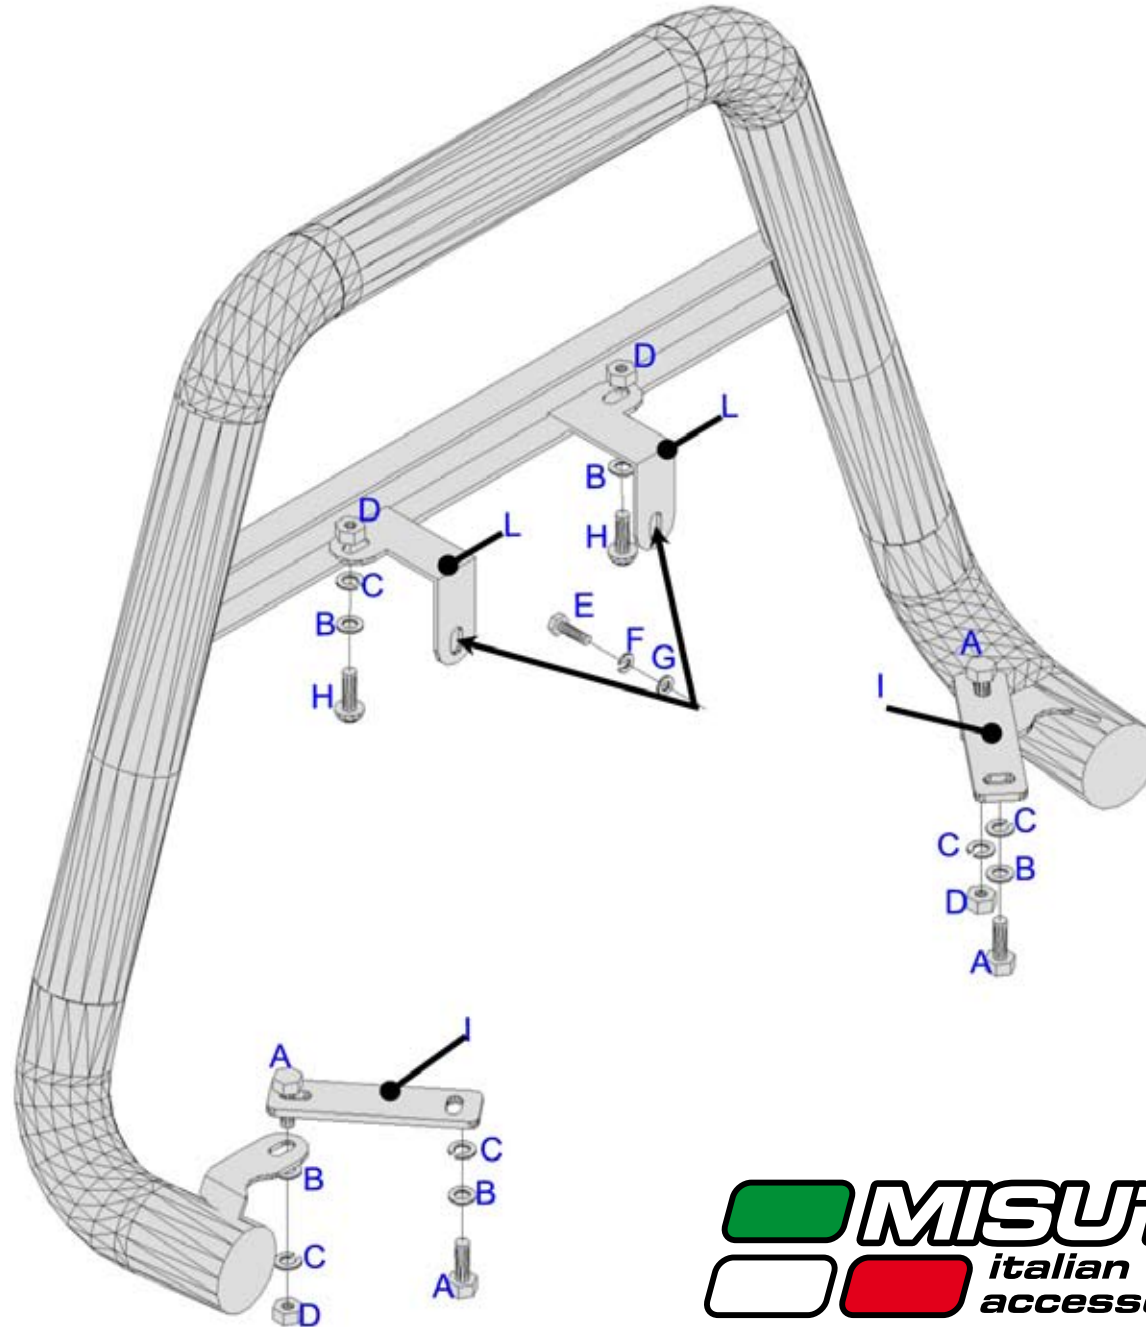

MISUTONIDA
italian style
accessories **4x4**

GB**FITTING
INSTRUCTIONS**

1. Remove the numberplate holder.
2. Remove the n.2 bolts shown in picture 1, fit H in the holes freed using A,B,C as shown in pictures 2 and 3.
3. Fit the L brackets in the holes of the numberplate holder using E,F,G as shown in picture 4.
4. Fit the lower welded brackets in the holes located on I bracket using A,B,C,D (picture 5).of bolts (picture 5)
5. Fit the L brackets in the holes located on the central plate using H,B,C,D as shown in picture 6.
6. Tighten all the set of bolts.

ITA**ISTRUZIONI DI
MONTAGGIO**

1. Rimuovere il porta targa.
2. Rimuovere i 2 bulloni indicati in foto 1, montare H nei fori appena liberati utilizzando A,B,C come indicato in foto 2,3.
3. Montare le staffe L nei fori del portatarga utilizzando E,F,G come indicato in foto 4.
4. Montare le staffe inferiori saldate nei fori presenti sulla staffa I utilizzando A,B,C,D (foto 5)
5. Montare le staffe L nei fori presenti sulla piastra centrale utilizzando H,B,C,D come indicato in foto 6
6. Serrare tutta la bulloneria.

FR**INSTRUCTIONS DE
MONTAGE**

1. *Enlever le porte plaque d'immatriculation.*
2. *Enlever les n.2 boulons indiqués dans la photo 1, monter H dans les trous libérés en utilisant A,B,C (photos 2 et 3).*
3. *Monter les pattes de fixation L dans les trous du porte plaque d'immatriculation en utilisant E,F,G (photo 4).*
4. *Monter les pattes de fixation inférieures soudées dans les trous présents sûr la patte de fixation I en utilisant A,B,C,D (photo 5).*
5. *Monter les pattes de fixation L dans les trous présents sûr la plaque centrale en utilisant H,B,C,D (photo 6)*
6. *Serrer toute la boulonnerie.*



Date Data Date	Item Code Cod.Articolo Réf. Article	Vehicle model Modello Veicolo Modèle de Voiture
03/10/11	MA/303/IX	GREAT WALL STEED/WINGLE

Document checked and approved by
Documento controllato ed approvato da
 Document contrôlé et approuvé par

**Botta
Pietro**

